


## Wymiary


## NRV

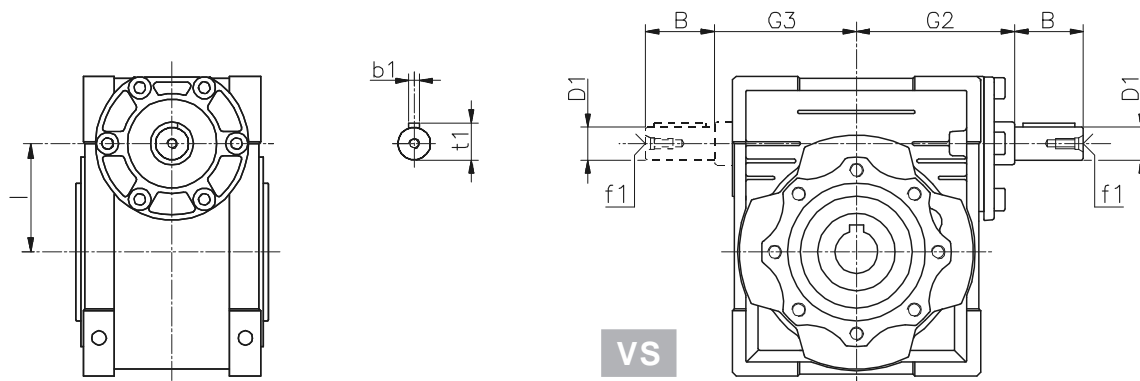

NRV	030	040	050	063	075	090	105	110	130	150
<b>B</b>	20	23	30	40	50	50	60	60	80	80
<b>D1</b>	9 j6	11 j6	14 j6	19 j6	24 j6	24 j6	28 j6	28 j6	30 j6	35 j6
<b>G2</b>	51	60	74	90	105	125	142	142	162	195
<b>G3</b>	45	53	64	75	90	108	135	135	155	175
<b>I</b>	30	40	50	63	75	90	110	110	130	150
<b>b1</b>	3	4	5	6	8	8	8	8	8	10
<b>f1</b>	-	-	M6	M6	M8	M8	M10	M10	M10	M12
<b>t1</b>	10,2	12,5	16	21,5	27	27	31	31	33	38

## Wymiary

## NRV-NMRV

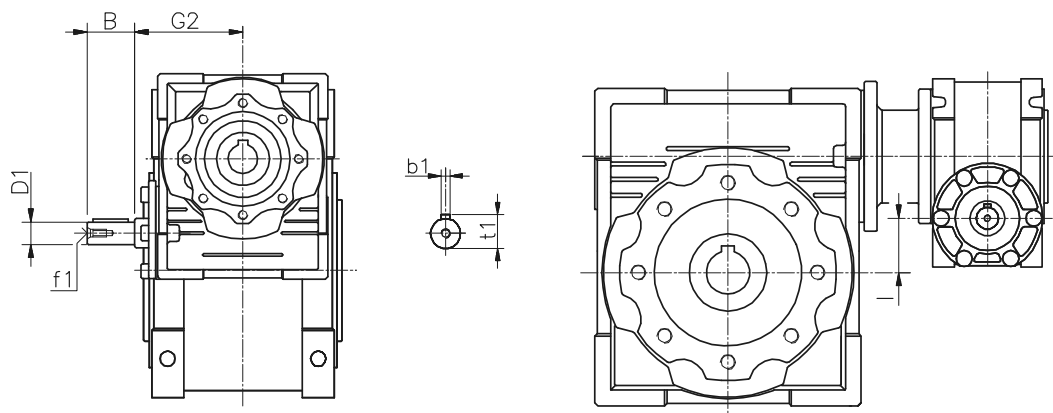

NRV-NMRV	030-040	030-050	030-063	040-075	040-090	050-105	050-110	063-130	063-150
<b>B</b>	20	20	20	23	23	30	30	40	40
<b>D1</b>	9 j6	9 j6	9 j6	11 j6	11 j6	14 j6	14 j6	19 j6	19 j6
<b>G2</b>	51	51	51	60	60	74	74	90	90
<b>I</b>	10	20	33	35	50	60	60	67	87
<b>b1</b>	3	3	3	4	4	5	5	6	6
<b>f1</b>	-	-	-	-	-	M6	M6	M6	M6
<b>t1</b>	10,2	10,2	10,2	12,5	12,5	16	16	21,5	21,5

Brakujące wymiary - szukaj w NMRV

For the missing dimensions, please consider the drawing of relevant NMRV size.